



TOTALLY WICKED®

 
AEROMAX



USER MANUAL




CONGRATULATIONS ON PURCHASING YOUR AEROMAX

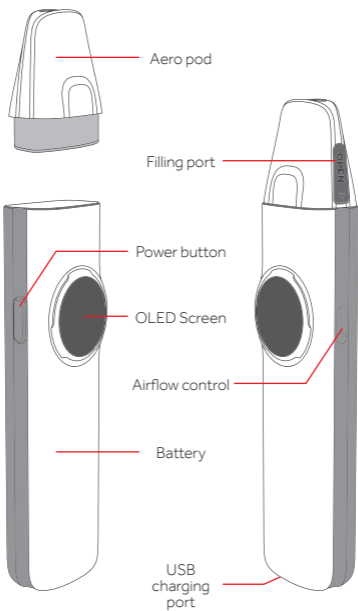



AEROMAX QUICK START GUIDE

 FILL THE POD

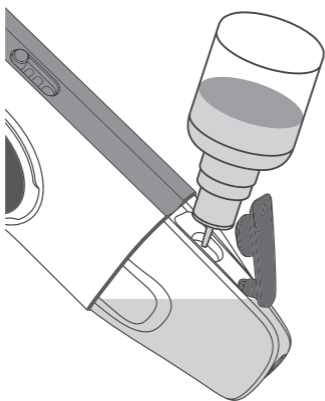


Wait 5 minutes before vaping a new pod.

AEROMAX

3




 TURN POWER ON

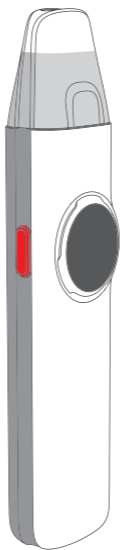



ADJUST AIRFLOW

 

Slide the airflow control button to expose the slots, adjust to suit your preference.

 
AEROMAX

5





ADJUST POWER SETTING

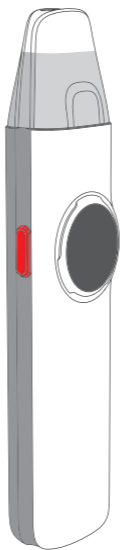

x3

 


Press to adjust the power.





VAPING

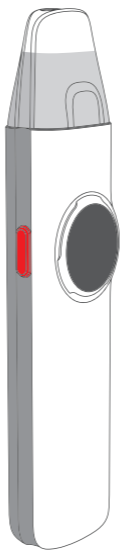

Press to vape or inhale on the mouthpiece.

 
AEROMAX

7





CHARGE THE BATTERY

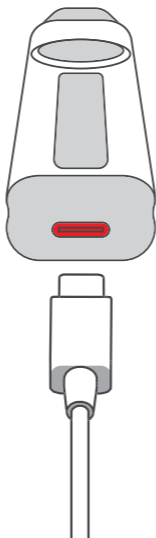



USING YOUR AEROMAX

The Totally Wicked Aeromax is a rechargeable, refillable pod device. The Aeromax's refillable pods can be used with almost any e-liquid.

FILLING THE AERO POD

Remove the Aero pod from all packaging. Open the filling port indicated by the arrow. Fill with e-liquid, ensuring to leave a 2mm air gap. Close the filling port. Insert the pod into the Aeromax.

The Aero pod does not need to be removed from the device to re-fill, as the filling port is located on the side of the mouthpiece.

Note: After filling the pod, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.

POWER ON AND OFF

To turn the device on or off, quickly press the power button 5 times. The screen on the front of the device will light up and display your current wattage and battery life remaining.

VAPING

The Totally Wicked Aeromax can be used by either pressing the button, or inhaling on the device.

AEROMAX

9



USING YOUR AEROMAX

POWER BUTTON LOCK

The Totally Wicked Aeromax has a power button lock feature, this is to prevent pods from prematurely being burnt due to the button being accidentally pressed. To lock the power button on the Totally Wicked Aeromax, press the button 4 times in quick succession, and the screen will display a lock symbol above the wattage symbol. Repeat this process to unlock the power button.

ADJUSTING THE AIRFLOW

The Totally Wicked Aeromax has an adjustable airflow control located on the side of the device. When the control button is at the bottom, the airflow is at the most open position. When pushed to the top, the airflow is fully closed. Adjust until you are happy with the airflow resistance of the device.

ADJUSTING THE POWER

The Totally Wicked Aeromax has adjustable wattage from 6 to 40W in 1W increments, with limits on selectable power range depending on the fitted pod resistance. With the device on and a pod connected, press the power button 3 times in quick succession, the wattage symbol will begin to flash, press or hold the power button until you reach your desired wattage.

The Totally Wicked Aeromax has built in atomizer protection, preventing the wattage from being set too high for the inserted pod resistance.



MEMORY FUNCTION

Once you have set your preferred wattage, vape 3 times consecutively with a puff duration above 1 second without removing your pod. The device will remember your preferred set wattage indefinitely. The Aeromax comes with 3 pre-selected wattage recommendations for different resistances. See table below.

Pod Resistance	Pre-saved Wattage	Adjustable Power Range
0.4ohm	31W	28-40W
0.6ohm	21W	15-25W
0.8ohm	14W	13-20W

Note: The device will store up to 3 different wattages for different resistance pods, but each one will need to be set separately.





CHARGING THE BATTERY

The Totally Wicked Aeromax requires charging, generally on a daily basis, but dependent on use. A newly charged battery will provide sufficient power for approximately two pods of e-liquid, but likely not a third. To charge the battery, connect the Aeromax to a suitable USB power supply using the USB-C cable provided. When charging, the screen will indicate the current level of charge. As the device charges from empty to full, the battery symbol on the screen will accumulate more bars.

USING YOUR AEROMAX

BATTERY LIFE INDICATION

The Totally Wicked Aeromax can indicate 4 levels of battery charge, shown by the battery indicator on the device screen. Below is a table detailing battery life indication.

Battery Percentage	Battery Symbol
100 - 76%	
75 - 51%	
50 - 26%	
25 - 1%	

CHANGING THE AERO POD

To change the Aero pod, remove the old pod and dispose of it. With a new pod, follow the instructions detailed in "Filling the Aero Pod". Once filled, insert the new pod. Please remember that after filling a new pod, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated. The pod should be changed when the internal atomizer has reached the end of its working life. Indicators that the pod may require replacement include a slight burnt taste, general loss of vapour production or a reduction in flavour intensity.







CLEANING THE AEROMAX

Clean the Totally Wicked Aeromax using a soft dry cloth or tissue; care should be taken to avoid direct contact with water. Clean the pod connection point in the battery carefully using a dry cotton swab.

Note: To avoid damaging the atomizer head, do not allow it to come into contact with water. Do not submerge the Totally Wicked Aeromax battery unit in water or allow it to get wet.

KIT CONTENTS

- 1 x Aeromax battery
 - 2 x Aero pods (0.8ohm)
 - 1 x USB-C cable
 - 1 x User manual
- 
- 

SPECIFICATIONS

Dimensions: 117mm x 26mm x 17mm

Weight: 86g

Battery capacity: 1100mAh



Max charging current: 2.0A

ADDITIONAL PRODUCT INFORMATION

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.



PRODUCT STORAGE, CHARGING AND BATTERY PRECAUTIONS

- Store the Aeromax and its accessories away from children whilst not in use.
 - Please only use the USB-C cable provided. Or a genuine TW accessory
 - The Aeromax is intended to be charged using a certified USB charger with a rated output of 5V dc, 0.5A minimum, or a certified host computer using USB 2.0 or higher. A suitable charger is available from all dedicated Totally Wicked stockists.
 - Unplug the battery from the charging device as soon as it is fully charged.
 - Do not leave battery unattended when on charge.
 - Do not charge the battery close to flammable materials or valuables.
 - Do not charge the battery in a damp environment, or in temperatures under 0°C or above 45°C.
 - Do not use the device in temperatures under -10°C or above 60°C.
 - Please dispose of dead batteries in accordance with your country's appropriate legislation.
 - Do not carry batteries in a pocket or bag with metallic objects.
 - Do not attempt to repair a faulty Aeromax battery as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.
- 
- 





WARNING

This product contains magnets. If you have an ICD or pacemaker, avoid close or prolonged contact with pods that are not fitted into the battery, and keep the assembled device at least 15cm from where your device is implanted.

WARRANTY

The Totally Wicked Aeromax has a 6-month parts warranty with the exception of pods, which are consumable items and covered by "dead on arrival" warranty only. If any parts are found to be faulty within this time, please contact our customer service team, whose details are on the back page of this booklet, and we will arrange for a replacement. We may require the goods to be returned for further investigation.





TOTALLY wicked®

Manufactured in China
under the authority of
Pillbox38 (UK) Ltd, Stancliffe Street,
Blackburn, Lancashire, BB2 2QR.
Tel: 01254 692244
www.totallywicked.co.uk

