



### Cleaning the Flex Pro Box

Clean the Flex Pro Box using a soft dry cloth or tissue; care should be taken to avoid direct contact with water. Clean the pod connection point in the battery carefully using a dry cotton swab.

### Contents

- 1 x Flex Pro Box Battery
- 1 x USB-C Cable
- 1 x User manual

**Flex Pro refillable and pre-filled pods are available separately.**

### Specifications

Dimensions: 55mm x 46mm  
x 20mm (excluding the pod)  
Battery capacity: 1000mAh  
Weight: 42g (excluding the pod)  
Max charging current: 1.0A

### Additional product information

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.

### Warning

This product contains magnets. If you have an ICD or pacemaker, avoid close or prolonged contact with pods that are not fitted into the battery, and keep the assembled device at least 15cm from where your device is implanted.

### Warranty:

The Flex Pro Box Battery comes with a 6-month limited warranty. Should the product fail due to any defect in manufacture or materials, please get in touch. We will require you to return a faulty product to our headquarters before issuing a replacement, complete with dated proof of purchase.

### Product storage, charging and battery precautions:

- Store the Flex Pro Box and its accessories away from children when not in use.
- Please only use the USB-C cable provided. A suitable charger is available from all dedicated Totally Wicked stockists.
- Unplug the battery from the charging device as soon as it is fully charged.
- Do not leave battery unattended when on charge.
- Do not charge the battery close to flammable materials or valuables.

- Do not charge the battery in a damp environment, or in temperatures under 0°C or above 45°C.
- Do not use the device in temperatures under -10°C or above 60°C.
- Please dispose of dead batteries in accordance with your country's appropriate legislation.
- Do not carry batteries in a pocket or bag with metallic objects.
- Do not attempt to repair a faulty Flex Pro Box battery as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.



Manufactured in China  
under the authority of  
Pillbox38 (UK) Ltd, Stancliffe Street,  
Blackburn, Lancashire, BB2 2QH,  
UK Tel: 01254 692244  
www.totallywicked.co.uk



**flex pro**  
**BOX**



User Manual

**flex pro**  
**BOX**  
VL TZ



User Manual






# VLTZ flex pro BOX


**The Totally Wicked VLTZ Flex Pro Box is a rechargeable battery intended for use with either pre-filled or refillable Flex Pro Pods.**

Pre-filled pods are simply disposed of after use. Refillable pods can be used with almost any e-liquid, but are specially suited to Totally Wicked VLTZ e-liquid.


## INSERT POD

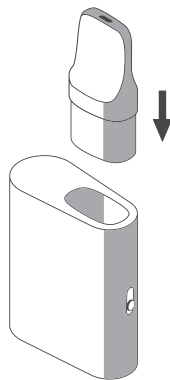

## ADJUST AIRFLOW

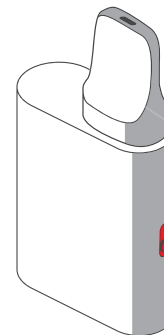

## CHARGE THE BATTERY

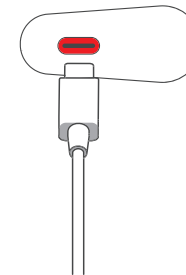

### Preparing a Flex Pro pre-filled pod for use

Remove the silicone covers from the top and bottom of the pod and insert directly into the battery. When a Flex Pro pre-filled pod begins to lose flavour, it has likely run out of e-liquid and requires replacing.

### Preparing a Flex Pro refillable pod for use

Remove the Flex Pro refillable pod from all packaging. Open the filling bung by lifting from its shorter side. Fill with e-liquid, ensuring to leave a 2mm air gap. Refit the filling bung and insert the pod into to the Flex Pro Box.

**Note:** After filling the pod, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.

### Vaping

Inhale gently on the mouthpiece and the device will begin to produce vapour. The LED on the front of the device will illuminate whilst vapour is being produced. Most vapers find that drawing vapour gently into the mouth, and then fully inhaling after removing the mouthpiece from their mouth, gives the greatest nicotine satisfaction with this type of vape pod.

### Adjusting the airflow

The Flex Pro Box has an adjustable airflow control located on the side of the battery. When the control button is positioned at the bottom, the airflow is fully open. When positioned at the top, the airflow will be most restricted. Adjust accordingly to your preference.

### Charging the battery

The Flex Pro Box requires charging, generally on a daily basis, but dependent on use. A newly charged battery will provide sufficient power for a full pod, but probably won't last for the whole of a second one. To charge the battery, connect the Flex Pro Box to a suitable USB power supply using the USB-C cable provided. When charging, the LED on the front of the device will indicate red, until the device is fully charged, at which point it will turn off.

### Battery life indication

The Flex Pro Box has 3 levels of battery charge, this is indicated by the LED(s) on the front of the device. Below is a table detailing battery life indication.

Battery Percentage	LED Colour
100-60%	Green
59-20%	Blue
<20%	Red

