

English
Notice for Use

Thank you for choosing Joyetech. Please read this manual carefully before use to ensure that your usage is correct. If you require any additional information or have any questions about the product or its use, please consult your local Joyetech agent, or visit our website at www.joyetech.com.

How to use:
1. Power on/off:

Hold the mod and pull the magnetic cell cover to open. Put one 21700 or 18650 battery (with the silicon sleeve on positive pole) inside and close the cell cover. Press the fire button 5 times in quick succession to turn the device on or off.

Note:

1. Please always use high rate 21700/18650 battery with continuous discharge rate (CDR)≥25A.
2. Please pay attention to the positive and negative signs when installing the cell.
3. Do NOT use cells with torn casings for safety reasons.

2. Vaping

Hold the fire button and inhale through the mouthpiece. Release the fire button and exhale. Please choose the correct mode and adjust the wattage to a proper range according to your atomizer before use.

3. Lock/unlock

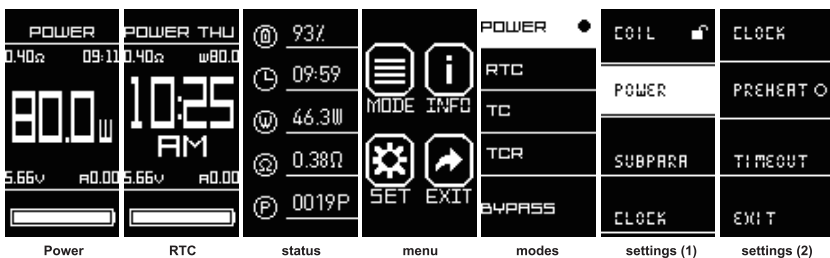
You can lock the screen by clicking the function button to avoid any touch by mistake. Also, the screen will be locked automatically each time when you click the fire button. Click the function button once to unlock. You can turn the screen on/off by clicking the function button 2 times in quick succession.

4. Charging & Upgrading

Please always use high-rate 21700/18650 battery. This device adopts equalizing charge system which supports quick charge capability with max charging current up to 2.0A. You can also take out the cells and charge them in a stand alone charger. Download the latest firmware at www.joyetech.com/mvr-software/ if available and connect it with a micro USB cable to update.



- ① 510 thread and spring connector
- ② Fire button
- ③ 1.3 inch touchscreen
- ④ Function button
- ⑤ USB port
- ⑥ Magnetic cell cover


General settings:

The ESPION Solo has a 1.3 inch touchscreen. When the device is on, swipe the screen to the right to check the mod status at a quick glance.

Menu system: Swipe the screen to the left to enter the main menu. In the menu, tap the icons to enter. There you can switch your modes, check battery and mod info, and change your settings. Inside of the settings, you can lock your coil head, adjust power output, set sub-parameters (puff/time/current), set the clock, turn the preheat on, and set timeout duration.

Output adjustment: Under power mode, tap the up/down arrows to adjust the wattage directly. Under TC/TCR modes, swipe the screen to the left. Tap the settings icon and then tap the power option. There you can adjust the output freely by tapping up/down arrows.

Temperature adjustment: Simply tap the up/down arrows to adjust the temperature directly under TC/TCR modes.

Timeout: In the menu system, tap to enter settings > timeout and choose the duration. Once set, the device will be powered off automatically when you hold the fire button over the duration as a self-protective system.

Indication and protection

Atomizer Short-circuit Protection: When atomizer short-circuit occurs, the screen will display Atomizer Short.

No Atomizer Alert: When you press the fire button and the screen displays No Atomizer Found. That mainly because there's no atomizer attached on the battery or it is not tightly secured.

Weak Battery Alert: When the device is working with the atomizer where battery voltage is under 2.1V, the screen will display Weak Battery. Meanwhile, output power will be reduced accordingly.

Low Power Alert: When the battery voltage is under 2.0V, the screen will show Battery Low. If you continue to press the fire button, it will show Battery low lock, then stop working. Please recharge the battery to reactivate. As soon as charging has commenced low-voltage protection will be unlocked.

Atomizer Low Alert: When resistance of the coil is lower than 0.1ohm under Power/Bypass mode (or < 0.05ohm under TC/TCR mode), the screen will display Atomizer Low.

Temperature Protection: Under TC/TCR mode, when the actual coil temperature reaches to the set temperature, the screen will show Protect.

Device Too Hot Alert: When the temperature of device is higher than 70 C, output will shut off automatically and display Device Too Hot.

Battery using:

1. Please use correct charging equipment by reputable suppliers.
2. Please choose good batteries from reputable companies.
3. Please put the batteries on a hard surface when charging.
4. Please turn off the device when it is not in use.
5. Please use dry cloth to clean the battery and its terminals when needed.
6. Don't use batteries with torn casings.
7. Don't leave the charging batteries unattended.
8. Don't expose the battery to extreme heat, cold or direct sunlight.
9. Keep away from water or any liquids.

Precautions:

1. Don't use the device in stormy weather or dust condition.
2. Connect the USB port and charger properly. Unplug the charger when the charging is completed.
3. Don't put the device in your pocket or handbag directly; don't mix it with coins, jewelry or other hard objects.
4. The charger and battery may heat when charging, keep away from flammable gas, liquid or other materials.

Warning:

1. Keep out of reach of children.
2. This device is not recommended for use by people under 18 or non-smokers.
3. This device is not suitable for use by pregnant or breast-feeding women.
4. This device is not suitable for use by people who has cardiovascular disease or respiratory disease.
5. This device is not suitable for use by people who diseases like cardiac dysfunction, high blood pressure or diabetes.

Attention:

1. Only have your device repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.
2. Do not leave the device in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0 C to 45 C while charging and -10 C to 60 C while in use.
3. Do not attempt to combine the device with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

Warranty terms:

Please refer to your Joyetech product warranty card. We are not responsible for any damage caused by user error. Our warranty is not valid for products purchased from third party vendors.

Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:

1. This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user.
2. This warranty may be void as a result of any of the following conditions:
 - * Customer does not provide warranty card and original receipt of purchase.
 - * Merchandise failure or damage is caused due to improper use or unauthorized repair.
 - * Merchandise failure or damage as a result of excessive force such as dropping.
 - * Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).
 - * Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).
 - * Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable).
3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.
4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

Joyetech reserves the right of final decision in all warranty cases.

Joyetech may interpret and revise the content of this warranty terms.