 




TOTALLY WICKED®

CONGRATULATIONS ON PURCHASING YOUR TOTALLY WICKED


TORNADO EX2 TANK

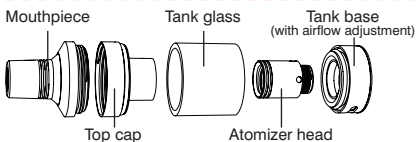

PRIMING YOUR TORNADO EX2 TANK

It is important to “prime” a new atomizer head before first use. Failure to do so can cause damage to the atomizer head.

Invert the tank. Holding the tank cap and glass, and gripping the airflow adjuster, unscrew and remove the tank base from the tank. Prime the atomizer head by dripping a few drops of e-liquid into its central hole to soak the wicking material visible through the hole. Screw the atomizer base back onto the tank cap and glass, then refit the tank assembly to the battery.

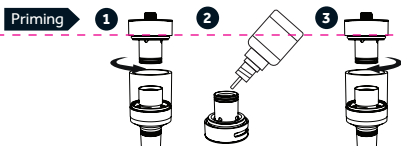


Note: Leave a new atomizer head to sit in a tank full of e-liquid for five minutes before vaping. This ensures the atomizer head is fully saturated with e-liquid before use.

Filling the Tank

Hold the tank top, and remove the mouthpiece by unscrewing it. Fill the tank with e-liquid using one of the dedicated fill holes located either side of the central air hole, **do not allow e-liquid to enter the central air hole**. Once filled, refit the mouthpiece.

Note: To avoid leaking, ensure an air gap of around 2mm remains above the filled liquid.

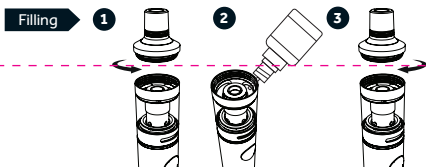


Adjusting Airflow:

If you find air flow too airy or too tight, rotate the airflow adjuster to expose fewer or more holes. Experiment to find your preference.



Replacing the Atomizer Head

Remove the tank from the battery and unscrew the tank base as described in *Priming the Atomizer Head* at the beginning of this manual. The atomizer head can be removed from the base by wiping dry and unscrewing. Remember to prime your new atomizer head after replacement.

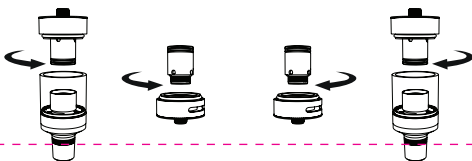

Atomizer Head Choice

The Tornado EX2 is fitted as standard with an EX 1.2ohm atomizer head, and an EX 0.5ohm atomizer head is provided as a spare. The fitted EX 1.2 ohm is suitable for tighter airflow similar to smoking a conventional cigarette, while the EX 0.5 ohm is suitable for more open airflow and will produce bigger clouds of vapour.

Kit Contents

- 1 x Tornado EX2 tank
- 1 x EX 1.2ohm atomizer head (fitted)
- 1 x EX 0.5ohm atomizer head (spare)
- 1 x User manual
- 1 x Spare parts

Specifications

- Dimensions: 19mm (diameter) *42.2mm (length)
- Tank Capacity: 2.0ml
- Atomizer Head Type: EX
- Atomizer Head Resistance: 0.5 - 1.2ohm
- Maximum Filling Nozzle Diameter: 2.8mm
- Tank Connection: 510 Connection

Additional product information

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.

Product Storage and Battery Precautions

- Store the Tornado EX2 tank and its accessories away from children when not in use.
- Do not attempt to repair a faulty Tornado EX2 tank, attempted repairs will void the warranty.

Warranty

The Tornado EX2 tank components have a 28 day parts warranty, with the exception of Atomizer Heads, which are consumable items and covered by "dead on arrival" warranty only. If any parts are found to be faulty within this time please contact our customer service team, whose details are on the back page of this booklet and we will arrange for a replacement. We may require the goods to be returned for further investigation.

TORNADO EX2 TANK

Manufactured in China under the authority of Pillbox38 UK Ltd,
Stancliffe Street, Blackburn, Lancashire, BB2 2QR.

UK Tel 01254 692244 www.totallywicked.co.uk
US Tel 1(888) 761-9425 www.totallywicked.com
DE Tel 0941-78447082 www.totallywicked.de

PILLBOX 38