

Cleaning the Switz Pro battery

Clean the Switz Pro using a soft dry cloth or tissue; care should be taken to avoid direct contact with water. Clean the pod connection point in the battery carefully using a dry cotton swab.

Kit contents

1 x Switz Pro battery
1 x USB-C cable
1 x User manual

Switz Pro refillable and pre-filled pods are available separately.

Specifications

Dimensions: 86mm x 24mm x 14mm (excluding the pod)
Battery capacity: 900mAh
Weight: 37g
Max charging current: 1.0A

Additional product information

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.

Product storage, charging and battery precautions

- Store the Switz Pro and its accessories away from children when not in use.
- Please only use the USB-C cable provided. Or a genuine TW accessory
- Unplug the battery from the charging device as soon as it is fully charged.
- Do not leave the battery unattended when on charge.
- Do not charge the battery close to flammable materials or valuables.
- Do not charge the battery in a damp environment, or in temperatures under 0°C or above 45°C.
- Do not use the device in temperatures under -10°C or above 60°C.
- Please dispose of dead batteries in accordance with your country's appropriate legislation.
- Do not carry batteries in a pocket or bag with metallic objects.
- Do not attempt to repair a faulty Switz Pro battery as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.

Warning

This product contains magnets. If you have an ICD or pacemaker, avoid close or prolonged contact with pods that are not fitted into the battery, and keep the assembled device at least 15cm from where your device is implanted.

Warranty

The Switz Pro battery has a 6 month parts warranty. If any parts are found to be faulty within this time, please contact our customer service team, whose details are on the back page of this booklet, and we will arrange for a replacement. We may require the goods to be returned for further investigation.

switz
PRO



Manufactured in China
under the authority of
Pillbox38 (UK) Ltd, Stancliffe Street,
Blackburn, Lancashire, BB2 2QR.
Tel: 01254 692244
www.totallywicked.co.uk



switz PRO



Rechargeable Battery

USER MANUAL

switz PRO

Rechargeable Battery

The Totally Wicked Switz Pro is a rechargeable battery intended for use with either pre-filled or refillable Switz Pro Pods.

Preparing a Switz Pro pre-filled pod for use

Remove the silicone covers from the top and bottom of the pod and insert directly into the battery. When a Switz Pro pre-filled pod begins to lose flavour, it has likely run out of e-liquid and requires replacing. Pre-filled pods are simply disposed of after use.

Preparing a Switz Pro refillable pod for use

Remove the Switz Pro pod from all packaging. Slide the top of the pod open by pushing on the side of the mouthpiece above the droplet symbol. Fill with e-liquid, ensuring to leave a 2mm air gap. Slide the pod closed; you will hear an audible click if closed correctly. Insert the pod into the Switz Pro.

Note: After filling the pod, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.

Vaping

Inhale gently on the mouthpiece and the device will begin to produce vapour. The LED(s) on the front of the device will illuminate whilst vapour is being produced. Most vapers find that drawing vapour gently into the mouth, and then fully inhaling after removing the mouthpiece from their mouth, gives the greatest nicotine satisfaction with this type of vape pod.

Charging the battery

The Switz Pro battery requires charging, generally on a daily basis, but dependent


on use. A newly charged battery will provide sufficient power for a full pod, but probably won't last for the whole of a second one. To charge the battery, connect the Switz Pro to a suitable USB power supply. When charging, the LED(s) on the front of the device will indicate the current level of charge. Below 30% only 1 LED will illuminate whilst the other two flash from left to right. From 30-70% two LED(s) will illuminate whilst the third one flashes. Once the device is fully charged, all three LED(s) will stay on for 10 seconds before turning off, indicating 100% charge.

Battery life indication


The Switz Pro has 3 levels of battery charge, this is indicated by the LED(s) on the front of the device. Below is a table detailing battery life indication.

| Battery Percentage | LED Condition |
|--------------------|----------------------------|
| 100-70% | All 3 LEDs will illuminate |
| 69-30% | 2 LEDs will illuminate |
| <30% | 1 LED will illuminate |


FILLING THE REFILLABLE POD

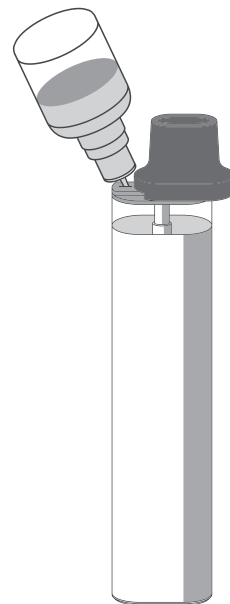

INSERT POD

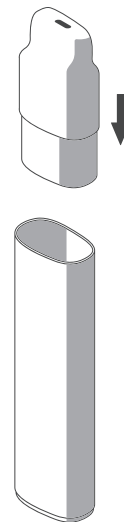

CHARGE THE BATTERY

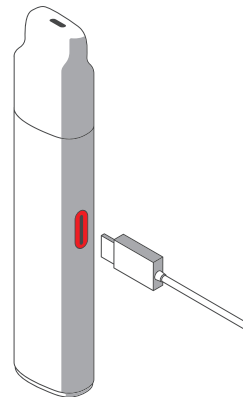

Wait 5 minutes before vaping a new pod.