

Cleaning the Flex Pro Bar

Clean the Flex Pro Bar using a soft dry cloth or tissue; care should be taken to avoid direct contact with water. Clean the pod connection point in the battery carefully using a dry cotton swab.

Contents

1x Flex Pro Bar battery
1x Flex Pro refillable pod
1x User manual

Specifications

Dimensions: 108mm x 24mm x 14mm
Battery capacity: 900mAh
Weight: 45g
Max charging current: 1.0A

Additional Product Information

There are no reported medical side effects with this product. If you believe you experience a side effect, please contact the manufacturer.



Replacement refillable pods and over 20 flavours of pre-filled pods are also available

Product Storage, Charging and Battery Precautions

- Store the Flex Pro Bar and its accessories away from children when not in use.
- Please only use a suitable USB-C cable and charger, available from all dedicated Totally Wicked stockists.
- Unplug the battery from the charging device as soon as it is fully charged.
- Do not leave the battery unattended when on charge.
- Do not charge the battery close to flammable materials or valuables.
- Do not charge the battery in a damp environment, or in temperatures under 0°C or above 45°C.
- Do not use the device in temperatures under -10°C or above 60°C.
- Please dispose of dead batteries in accordance with your country's appropriate legislation.
- Do not carry batteries in a pocket or bag with metallic objects.
- Do not attempt to repair a faulty Flex Pro Bar battery as these are sealed units with no serviceable parts. Attempted repairs will void the warranty.

Warning

This product contains magnets. If you have an ICD or pacemaker, avoid close or prolonged contact with pods that are not fitted into the battery, and keep the assembled device at least 15cm from where your device is implanted.

Warranty

The Flex Pro Bar has a 6 month parts warranty, with the exception of pods, which are consumable items and covered by "dead on arrival" warranty only. If any parts are found to be faulty within this time, please contact our customer service team, whose details are on the back page of this booklet, and we will arrange for a replacement. We may require the goods to be returned for further investigation.



VL TZ
flex pro
BAR KIT

flex pro
BAR KIT

TOTALLY WICKED

Manufactured in China under the authority of Pillbox38 (UK) Ltd, Stancliffe Street, Blackburn, Lancashire, BB2 2QR.

UK Tel: 01254 692244
www.totallywicked.co.uk

User Manual



The Totally Wicked VLTZ Flex Pro Bar is a rechargeable battery intended for use with either pre-filled or refillable Flex Pro Pods.

The refillable pods included with this kit can be used with almost any e-liquid, but are specially suited to Totally Wicked VLTZ e-liquid.

Preparing a Flex Pro Refillable Pod for Use

Remove the Flex Pro refillable pod from all packaging. Open the filling bung by lifting from its shorter side. Fill with e-liquid, ensuring to leave a 2mm air gap. Refit the filling bung and insert the pod into the Flex Pro Bar.

Note: After filling the pod, it is recommended to wait 5 minutes to ensure the atomizer head is fully saturated.

Atomizer Head Lifespan

Atomizer heads do not last forever and need to be replaced periodically. Lifespan is generally from a few days to several weeks, depending on vaping style, flavour and type of e-liquid. A slight burnt taste, general loss of vapour production, or a reduction in flavour intensity can all be indicators that the pod requires replacement.

Vaping

Inhale gently on the mouthpiece and the device will begin to produce vapour. The LED(s) on the front of the device will illuminate whilst vapour is being produced. Most vapers find that drawing vapour gently into the mouth, and then fully inhaling after removing the mouthpiece from their mouth, gives the greatest nicotine satisfaction with this type of vape pod.

Charging the Battery


The Flex Pro Bar requires charging, generally on a daily basis, but dependent on use. A newly charged battery will provide sufficient power for a full pod, but probably won't last for the whole of a second one. To charge the battery, connect the Flex Pro Bar to a suitable USB power supply. When charging, the LED(s) on the front of the device will indicate the current level of charge. Below 30% only 1 LED will illuminate whilst the other two flash from left to right. From 30-70% two LED(s) will illuminate whilst the third one flashes. Once the device is fully charged, all three LED(s) will stay on for 10 seconds before turning off, indicating 100% charge.

Battery Life Indication


The Flex Pro Bar has 3 levels of battery charge, this is indicated by the LED(s) on the front of the device. Below is a table detailing battery life indication.

Battery Percentage	LED Condition
100-70%	All 3 LED(s) will illuminate
69-30%	2 LED(s) will illuminate
<30%	1 LED will illuminate

FILLING THE POD

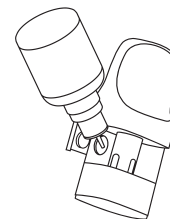

INSERT THE POD

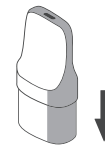

CHARGE THE BATTERY

